

How do I purge my hot tub?

Pressure filter



1. Loosen the purge cap 1/2 of a rotation
2. Wait for the water to come out
3. Tighten the cap

Floating filter



Vídeo: [How do I purge my hot tub?](#)



Loosen the screw on the electrical resistor

